




# Disassembling Sony Cyber-shot DSC-W5 Back Cover

Written By: Thomas

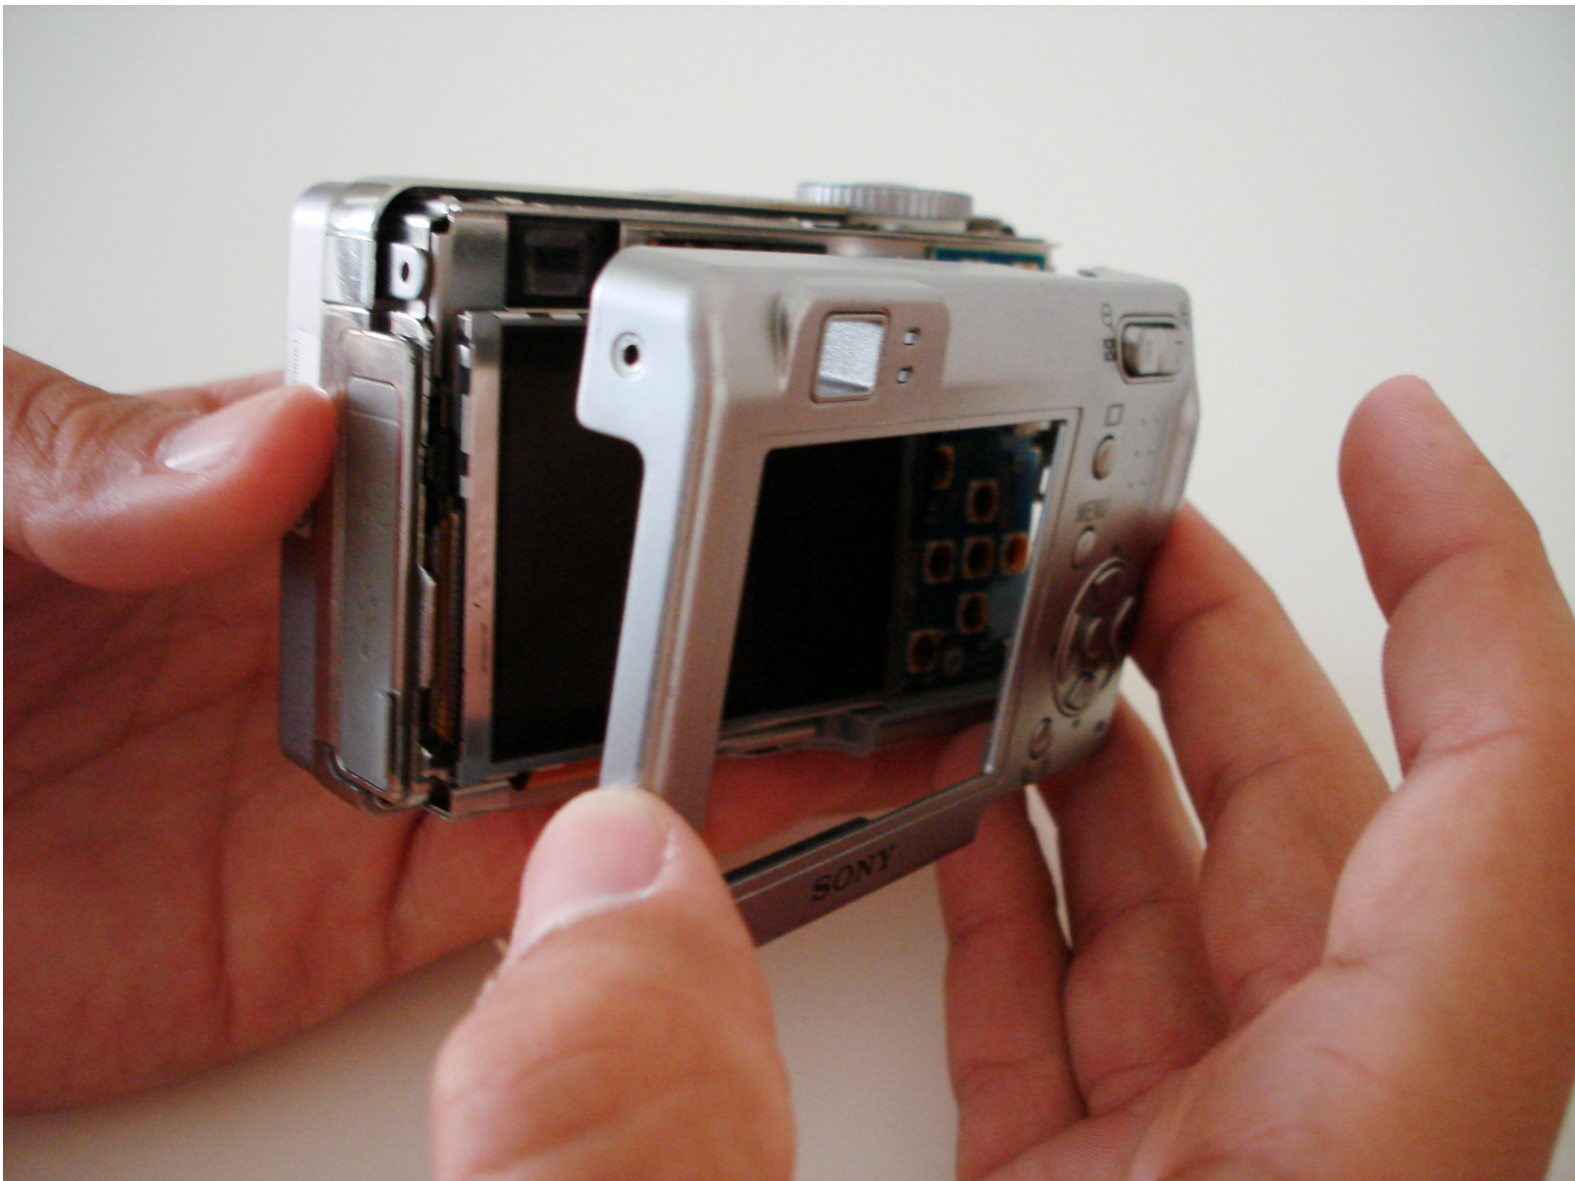

## INTRODUCTION

We will be taking off the back cover, or case, of the camera to gain access to the internal components including the speaker, LCD screen, lens, and motherboard.


---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Cover

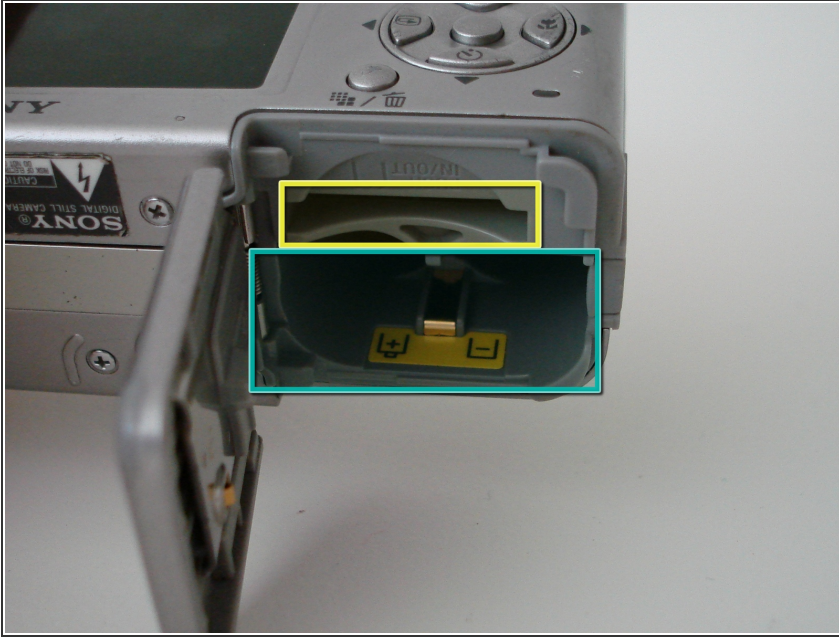

- Remove Memory Stick Pro from the card reader slot on the bottom of the camera.
- Remove both batteries.


## Step 2

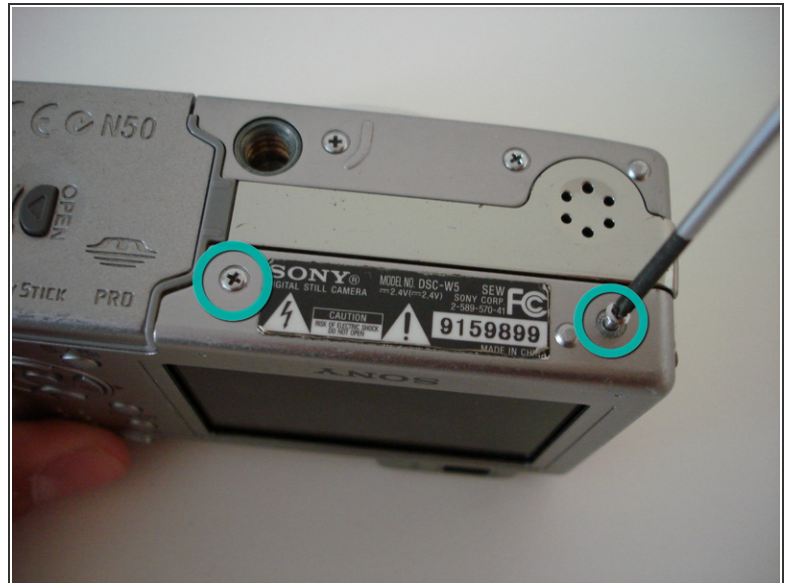

- Remove the single visible screw from both sides of the camera.
  - Remove the two screws that are adjacent to the warning label, which is on the underside of the camera.
- i** Do **NOT** remove all four screws from the bottom.



## Step 3

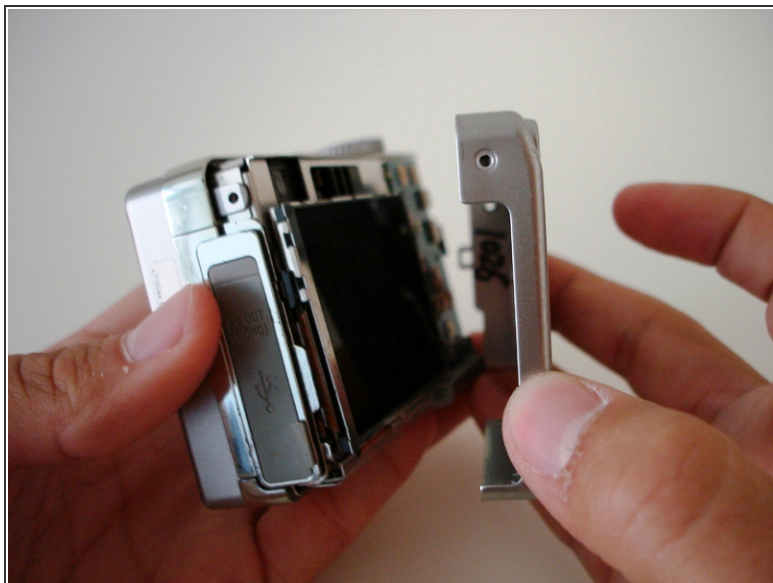

- Gently remove the back cover from the camera.
- ⓘ The first time the case is removed, it will be stiff. Be patient and gently rock the cover back and forth until it slides free.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 01:28:12 AM.